


WICKED WINDOW

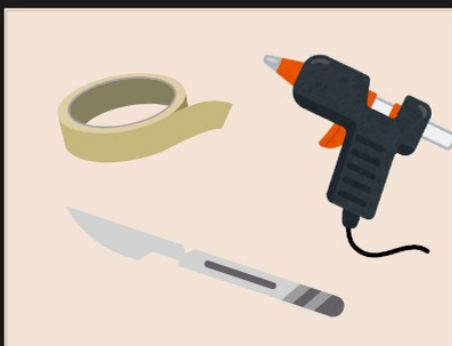

Prep your window:

1. Cut a "window" into the lid of your shoebox. Be careful to leave enough of a border that the cardboard does not fall apart.
2. Attach parchment or wax paper to the inside of your box lid so that it covers your whole "window". Set the lid aside.
3. Grab the body of your box. Tape a sheet of aluminum foil to the bottom and sides of your box, lining it completely.
4. Poke two small holes in the bottom of your box. Place one LED light (single or Tri-Color, whatever color you choose) in each hole.

WICKED WINDOW

Create your scene:

1. Draw, trace, or print a simple spooky scene on black paper. The scene should be the same size as your "window."
2. Carefully cut out your scene.
3. Flip your scene over. Grab your window lid.
4. Attach your spooky scene to the inside of your window lid via the wrong side. Place the lid, with the scene in place, back onto your box.
5. Program your LED lights to glow or flicker.

Add sensors, sounds, or other spooky effects. Enjoy!

